


K Line

K121

Universal isolated transmitter with 2 wire - loop powered

Installation Manual

- Contents:**
- General specifications
 - Technical features
 - Diagram: Load resistance vs minimum functioning voltage.
 - Installation / Connections rules
 - Electrical connections
 - Table: Input range and accuracy of measure
 - Factory settings and advanced settings.

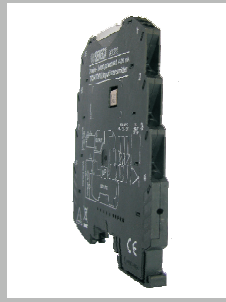

SENECA s.r.l.
Via Germania, 34 - 35127 - Z.I. CAMIN - PADOVA - ITALY
Tel. +39.049.8705355 - 8705359 - Fax +39.049.8706287
For manuals and configuration software, see www.seneca.it

This document is property of SENECA srl. Duplication and reproduction are forbidden, if not authorized. Contents of the present documentation refers to products and technologies described in it. All technical data contained in the document may be modified without prior notice. Content of this documentation is subject to periodical revision.

GENERAL SPECIFICATIONS

- Conversion and transmission of the input read into a normalized signal current in the output for the loop 4 ..20 mA that is connected with 2 wire connection.
- Thermocouple input J, K, R, S, T, B, E, N (EN 60584) .
- RTD input (Pt100 - 500 - 1000, Ni100) with 2, 3 or 4 wire connections.
- Voltage input ± 30 V.
- Voltage input ± 150 mV
- Current input ± 24 mA.
- Potentiometer input with resistance between 500 Ω and 10 K Ω .
- Resistance input up to 1760 Ω .
- Reduced response time (Voltage and Current input): 140 ms
- Reduced response time (Other inputs): < 620 ms
- High precision.
- 16-bit measurement conversion.
- 1500 Vac output isolation.
- Compact size 93 x 102,5 x 6,2 mm.

TECHNICAL FEATURES

Output / Power supply	
Power supply	7 ..30 Vdc
Power consumption	< 660 mW
Current output	4 ..20 mA
Load resistance	1 k Ω @ 28 Vdc, 21 mA (see the diagram Load resistance vs minimum functioning voltage).
Resolution	2 μ A (> 13 bit)
Output in case of over-range	+ 2,5% of end scale, - 2,5% of start scale
Output in case of fault	+ 5% of end scale, - 5% of start scale
Current output protection	~ 30 mA
Potentiometer input	
Value of potentiometer	From 500 Ω to 10 k Ω
Input impedance	10 M Ω
Thermocouple input	
Input impedance	10 M Ω
Cold junction compensation	-40 ..65 $\pm 1,5^{\circ}$ C; Settable
Sensor fault detection	Yes; Settable
RTD input / Resistance	
Exitation current	375 μ A
Maximum cable resistance	25 Ω
Influence cable resistance	0,003 Ω/Ω

Voltage (mV) input	
Input impedance	10 M Ω
Input range	-150 ..150 mV
Voltage (V) input	
Input impedance	200 k Ω
Input range	-30 ..30 Vdc
Current input	
Input impedance	40 Ω
Input range	-24 ..24 mA
Environmental condition	
Operating temperature	-20 ..+65 $^{\circ}$ C
Humidity	30 ..90% a 40 $^{\circ}$ C non condensing
Storage temperature	-20 ..+85 $^{\circ}$ C
degree protection	IP20
Connections	
Connections	8 Spring terminals
Dimensions / Box	
Dimensions	L: 93 mm; H: 102,5 mm; W: 6,2 mm
Box	PBT, Black

Isolation 1500 V	
Standards	
The module is conforming to the following regulations:	
	EN61000-6-4/2002 (Electromagnetic emission, industrial environment).
	EN61000-6-2/2006 (Electromagnetic immunity, industrial environment).
	EN61010-1/2001 (safety). All circuits must be isolated from the other circuits under dangerous voltage with double isolation. The power supply transformer must comply with EN60742 "Isolated transformers and safety transformers".

SUPPLEMENTARY NOTE FOR USE:
Use in environment with 2 or less pollution degree.

DIAGRAM: LOAD RESISTANCE VS MINIMUM FUNCTIONING VOLTAGE


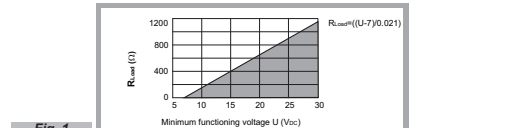


Fig. 1

INSTALLATION / CONNECTIONS RULES


Installation on DIN46277 rail

The module is designed to be installed, in vertical position, on DIN 46277 rail. For the best module performance and duration, avoid to place cables raceways and other objects that could obstruct the ventilation. Never install the modules near heat sources. The module installation is advised in the bottom of the control panel.

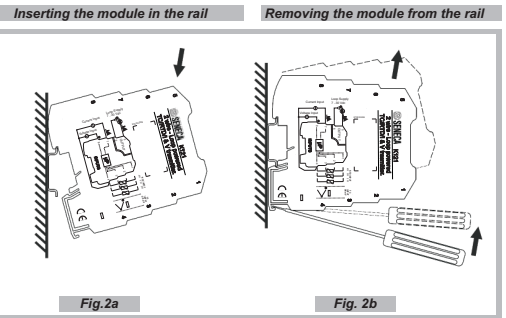

- Attach the module in the upper part of the rail (as shown in the picture 2a).
- Press the module downwards.
- Apply leverage using a screwdriver (as shown in the picture 2b)
- Rotate the module upwards.

Connections with spring terminals

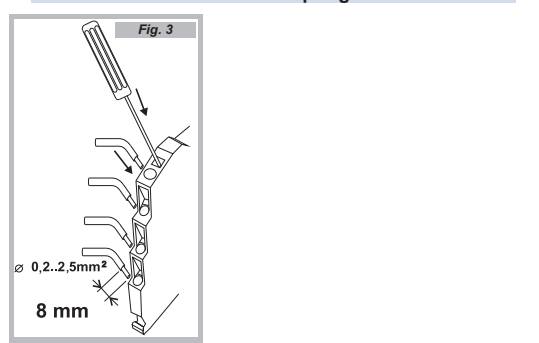

The module has been designed for spring-type terminal electrical connections: Proceed as follows to make the connections:

- Strip the cables by 0.8 mm.
- Insert a screwdriver in the square hole and press it until the cable lock spring opens..
- Insert the cable in the round hole.
- Remove the screwdriver and make sure that the cable is tightly fastened in the terminal.


ELECTRICAL CONNECTIONS

Input

Description
The signal input may come from thermocouple J, K, R, S, T, B, E, N (EN 60584) sensors or RTD (thermoreistance) like Pt100, Ni100, Pt500, Pt1000 and Ni100. K121 besides can read voltages in V and mV, current in mA, and resistances.

For the maximum performance it's recommended to use a shielded cable.

See Fig. 4 below for input connections.

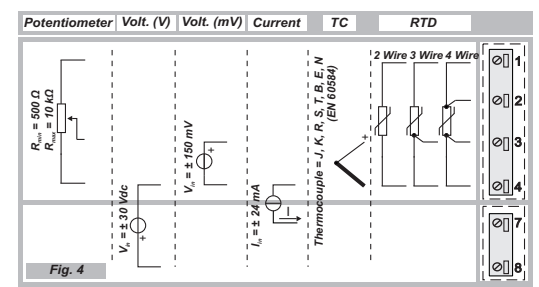


RTD 2 wire connection
This connection can be used for short distances (< 10 m) between module and probe, you should note that it adds an error (which may be removed by software programming) equivalent to the resistance contributed by the connection cables to the measurement. The module must be programmed by PC for 2 wire connection

RTD 3 wire connection
This connection can be used for medium-long distances (> 10 m) between module and probe. The instrument performs a compensation for the resistance of the connection cables. For a correct compensation the resistance value of each conductor must be the same. The module must be programmed by PC for 3 wire connection.

RTD 4 wire connection
This connection can be used for medium-long distances (> 10 m) between module and probe. Provides the maximum precision because the instrument measures the resistance of the sensor independently of the resistance of the connection cables. The module must be programmed by PC for 4 wire connection.

Output and power supply from loop 4 ..20 mA
Current Loop connection (regulated current). The use of shielded cables is recommended for the electric connections.

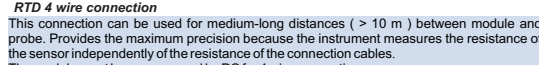

Note: in order to reduce the instrument's dissipation, we recommend guaranteeing a load of > 250 Ω to the current output.

Table: Output signal limit / fault or over-range

Output signal limit	Over-range / $\pm 2,5$ %	Fault ± 5 %
20 mA	20,4 mA	21 mA
4 mA	3,6 mA	< 3,4 mA

TABLE: INPUT RANGE AND ACCURACY OF MEASURE

	Input	Range	Calibration error	EMI	Minimum Span	Resolution	Standard
Thermocouple	J	-210..1200 $^{\circ}$ C	0,1 %	< 0,5 %	50 $^{\circ}$ C	5 μ V	EN 60584
	K	-200..1372 $^{\circ}$ C	0,1 %	< 0,5 %	50 $^{\circ}$ C	5 μ V	EN 60584
	R	-50..1768 $^{\circ}$ C	0,1 %	< 0,5 %	100 $^{\circ}$ C	5 μ V	EN 60584
	S	-50..1768 $^{\circ}$ C	0,1 %	< 0,5 %	100 $^{\circ}$ C	5 μ V	EN 60584
	T	-200..400 $^{\circ}$ C	0,1 %	< 0,5 %	50 $^{\circ}$ C	5 μ V	EN 60584
	B	0..1820 $^{\circ}$ C	0,1 %	< 0,5 %	100 $^{\circ}$ C	5 μ V	EN 60584
RTD	E	-200..1000 $^{\circ}$ C	0,1 %	< 0,5 %	50 $^{\circ}$ C	5 μ V	EN 60584
	N	-200..1300 $^{\circ}$ C	0,1 %	< 0,5 %	50 $^{\circ}$ C	5 μ V	EN 60584
	Ni100	-60..250 $^{\circ}$ C	0,1 %	< 0,5 %	20 $^{\circ}$ C	6 m Ω	DIN 43760
	Pt100	-200..650 $^{\circ}$ C	0,1 %	< 0,5 %	20 $^{\circ}$ C	6 m Ω	EN 60751
	Pt500	-200..650 $^{\circ}$ C	0,1 %	< 0,5 %	20 $^{\circ}$ C	28 m Ω	
Pt1000	-200..200 $^{\circ}$ C	0,1 %	< 0,5 %	20 $^{\circ}$ C	28 m Ω		
Voltage	mV	-150..150 mV	0,1 %	< 0,5 %	2,5 mV	5 μ V	
Potent.	Ω	500.. 10000 Ω	0,1 %	< 0,5 %	10 Ω	0,0015 %	
Resist.	Ω	0..400 Ω	0,1 %	< 0,5 %	10 Ω	6 m Ω	
Resist.	Ω	0..1760 Ω	0,1 %	< 0,5 %	10 Ω	28 m Ω	
Voltage	V	-30 ..30 Vdc	0,1 %	< 0,5 %	0,5 V	~ 1 mV	
Current	mA	-24 ..24 mA	0,1 %	< 0,5 %	0,5 mA	~ 1 μ A	

Table of accuracy measure: The greater of the sum of (A+B) and C

Input type	A : % of measure	B : % of span	C : Minimum
Thermocouple J,K,T,N,E	0,05 %	0,05 %	0,5 $^{\circ}$ C
Thermocouple B, R, S	0,05 %	0,05 %	1 $^{\circ}$ C
RTD	0,05 %	0,05 %	0,1 $^{\circ}$ C
Resistance F.S. = 400 Ω	0,05 %	0,05 %	40 m Ω
Resistance F.S. = 1760 Ω	0,05 %	0,05 %	200 m Ω
Voltage mV	0,05 %	0,05 %	15 μ V
Potentiometer	0,05 %	0,05 %	3 mV
Voltage V	0,05 %	0,05 %	3 mV
Current	0,05 %	0,05 %	2 μ A

FACTORY SETTINGS AND ADVANCED SETTINGS

Factory settings


- Cold junction compensation: YES.
- Input filter: DISABLE.
- Reversed output: NO.
- TC Type: K.
- Measurement range start: 0 $^{\circ}$ C.
- Measurement full-scale: 1000 $^{\circ}$ C.
- Output signal in case of fault: Towards the top of the output range.
- Over-range: YES (the fault alone causes at 2,5% over range value) or YES (at 2,5 over-range value is accepted, at 5% over range value is considered a fault).
- Cold junction compensation: YES / NO.

Advanced setting

- Setting of the start scale and full scale value.
- RTD: 2 wire, 3 wire, 4 wire connections.
- Measure filter: Enable / Disable
- Output: Normal (4 ..20 mA) or reversed (20 ..4 mA).
- Selection of input type.
- Cable resistance compensation for 2 wires measurement.
- Output signal in case of fault: towards the bottom or towards the top of the output range
- Over-range: NO (the fault alone causes at 2,5% over range value) or YES (at 2,5 over-range value is accepted, at 5% over range value is considered a fault).
- Cold junction compensation: YES / NO.

Software configuration

The configuration by PC use (see the drawing below) is possible with the following accessories

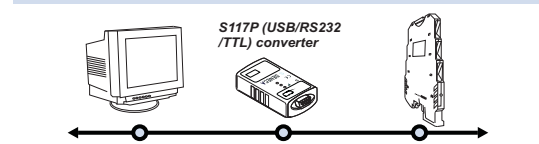

Variations of standard parameters are possible by using configuration softwares. See www.seneca.it to consult the download section.

Disposal of Electrical & Electronic Equipment (Applicable throughout the European Union and other European countries with separate collection programs). This symbol, found on your product or on its packaging, indicates that the product should not be treated as household waste when you want to dispose of it. Instead, it should be handed over to an applicable collection point for the recycling of electrical & electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences to the environment and human health, which could otherwise be caused by inappropriate disposal of this product. The recycling of materials will help to conserve natural resources. For more detailed information about the recycling of the product, please contact your local city office, waste disposal service of the retail store where you purchased this product.